



Spare Parts List for T O R P E D O Coaster Brake

Ill. No.	Order No.	Description	Ill. No.	Order No.	Description
1	0316 061 004	Hex. nut FG 9,5 (2 ea)	21	0304 001 500	Roll guide ring
-	0316 067 500	Cap nut FG 9,5 (2 ea)	22	0305 001 000	Driving roll, 6,5 mm (5 required)
2	1603 017 100	Lock nut FG 9,5	22	0305 007 000	Driving roll, 6,6 mm (5 required)
3	2318 004 004	Lock washer	22	0305 009 000	Driving roll, 6,7 mm (5 required)
4	0319 101 103	Brake lever	23	0372 100 201	Driver <i>J. K. Kelly 1/4"</i>
5	0515 004 104	Cylinder screw M5	24	1676 103 100	Ball bearing (driver)
6	Depending on Design	Brake arm clip bore 5,3 mm (pls indicate size)	25	1604 013 002	Dust cap (in driver)
7	0516 105 004	Hex. nut M5	26	0351 100 000	Axle, length 145 mm
8	0374 109 100	Lever cone ass'y (only complete unit)	26	0351 070 100	Axle, length 155 mm
9	0321 001 000	Lever cone cover	26	0351 034 100	Axle, length 159,5mm
10	0321 002 000	Press-in cap (for hub shell)	27	0308 001 100	Fixed cone
11	0376 100 000	Ball bearing (2 ea.)	28	0321 037 105	Dust cap
12	0350 007 111	Hub shell, 36 holes 13 gage bore	29	Depending on number of teeth	Sprocket 1/2 x 1/8", push-on type
12	0350 007 120	Hub shell, 36 holes 12 gage bore	30	0518 018 000	Washer
13	0373 100 000	Brake cylinder	31	0512 011 000	Circlip
14	0350 052 100	Brake cone ass'y	32	0324 100 100	Spanner
15	0112 103 000	Circlip			<u>SPECIAL PARTS, LUBR.</u>
16	0317 004 000	Washer			
17	0304 006 100	Friction spring sleeve			
18	0305 005 000	Roll, 4,5 mm dia.			
19	0306 002 200	Brake cone (bare) *			
20	0312 003 000	Circlip			

www.torpedo-coasterbrake.com
 original parts and hubs
 assembly instructions
 trouble shooting